


### REPEATER (ISTATION: TXIST)

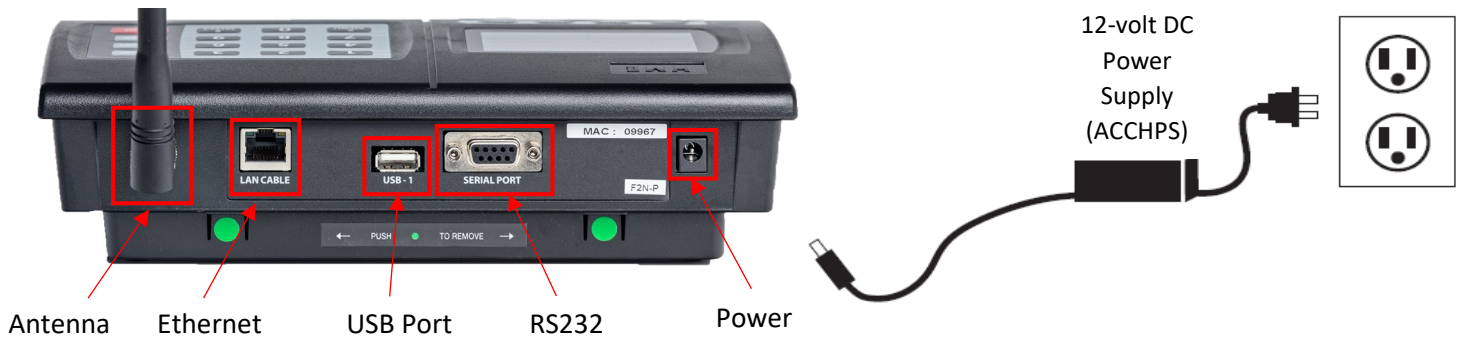

#### Positioning and Installing the Repeater

The repeater operates at its best when installed near the perimeter of the area covered by the transmitter. Place the Repeater in a position away from the transmitter but within range to allow it to receive and resubmit the signal.

1. Locate a 110V Outlet near the selected installation location.
2. Plug the power supply into the power jack on the back of the repeater and then into the wall outlet.
3. Place the main **Paging Transmitter** in “Range Test Mode” (see transmitter operating instructions).
4. When the repeater unit receives a signal from the transmitter, the “R” indicator will display first, then the “T” indicator will display next. This indicates that the signal is being re-transmitted over the air.
5. Ensure that the “R” & “T” indicators show on the display
  - If the “R” & “T” do not display in the top right corner of the LCD, move the repeater closer to the transmitter until they do.
  - After establishing the correct distance, mount the repeater as high as possible.

#### Example

