

 
Components

- JTECH Transmitter
Applies to models: IQ Base, NEO, IStation
- Coaster Pagers
- Coaster Charger




Step 1

Lock the antenna to the connector on the transmitter by placing the antenna on the connector and twisting left to lock in place.

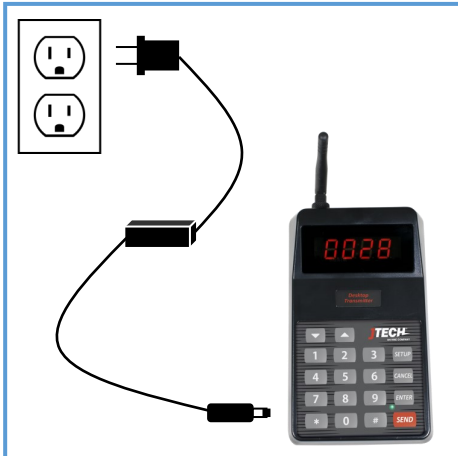

Step 2

 Plug the power supply into the transmitter and then into a standard 110-240v outlet. A surge protector is recommended.

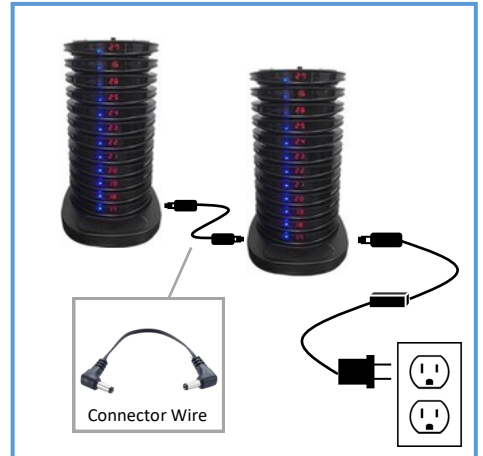

Step 3

Compile charger bases and connector wires if applicable. Plug charger power supply into charger and then into a standard outlet. Surge protection is recommended for charging bases.



Step 4

 
 
Add pagers to base. You will see a BLUE light on each pager. This light indicates the charging status.



- 'LO' on the number display: Battery is below 20% charged and SHOULD NOT be used.
- **Flashing BLUE**: Pager is charging and CAN BE used.
- **Solid BLUE**: Pager is fully charged.
- Allow 4 hours for a complete charge of the pagers.

Using your GuestCall Paging System

1. Remove a Coaster Pager from the charger.
2. The pager will go through a test page.
3. Hand the pager to the guest, letting them know the pager will go off when they have been paged.

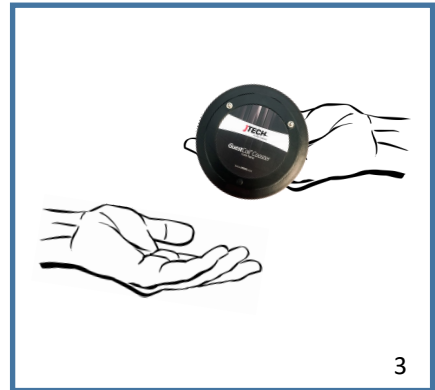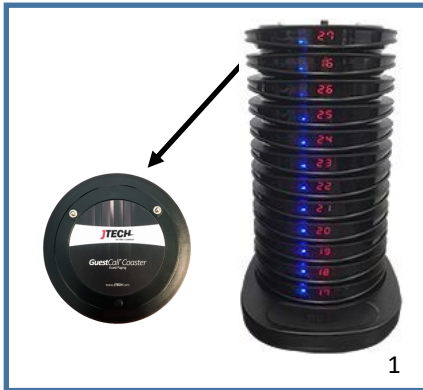

Paging a Guest

1. Enter in the 1 to 4-digit pager number into the transmitter and press SEND.
2. The pager will alert until it is returned to the charger.



Additional information available at www.jtech.com/support.

800.321.6221 | wecare@jtech.com

©2024 JTECH Global Enterprises Inc logo and product names are registered trademarks of JTECH Global Enterprises, Inc. All rights reserved.