

Installing Table Scout

System Programming

To enter programming mode, press and hold the "Bus" and "Close" button for 4 seconds to bring up the password prompt. Enter the password "2580" followed by "Enter" key. If the password is accepted, the display will show "Menu 1-9."

Use the following keys to edit the current configuration:

- "Seat" button to scroll to a different menu.
- "Enter" button allows user to enter each menu or save the current configuration
- "Cancel" button clears user entries
- "Bus" button changes OFF to ON and vice versa



Menu 1 - Set the Current Time

- At the "Set Current Time" menu, set the hour then press "Enter" key.
- Set the minutes and press "Enter" key.
- Press the "Cancel" key 2 times to exit the system-programming menu.

Menu 2 - Set the transmitter Base ID

Each system has a unique ID so that it will not interfere if they are too close to each other. The base ID is a 3-digit number and it should match the ID of the serial receiver unit that is connected to your computer.

NOTE: The base ID is preset at the factory and it should only be changed if necessary.

- At the "**Base ID**" menu, enter the 3-digit base ID followed by the "enter" key.
- Press the "**Cancel**" key 2 times to exit the system-programming menu.

Menu 3 - Set the System Group ID

This is pre-set at the factory, and it should not be changed. **Default: 1247**

Menu 4 - Set Baud Rate

This is pre-set at the factory, and it should only be changed if necessary. **Default: 1200**

Menu 5 - Set Frequency

JTECH uses 2 different receiving frequencies. The IStation frequency should match the table scout frequency. Check the label on the back of the IStation. If the label says,

- F1 – this is equivalent to frequency 452.5750 MHz on the table scout.
- F2 – this is equivalent to frequency 467.9250 MHz on the table scout



To change the frequency on the Table Scout:

- At the "Freq" menu, press BUS until you get to the desired frequency (this frequency needs to match the Receive Frequency of the IStation). Press the enter key to save the frequency.
- Press the "Cancel" key 2 times to exit the system-programming menu.

Menu 7-9 - NOT USED for PRO-HOST system