

JTECH[®] EXTEND Two-Way Radios

Keypad Lock

The Keypad Lock can be activated to avoid accidentally changing the channel and the unit's preferred settings, while still being able to use the Push-To-Talk button and flashlight.



Turn On Keypad Lock
Long Press of the F button.



How to Know it's Working
The radio will beep and a lock will appear in the upper right corner of the screen.



While Locked
The Push-to-Talk and F button will still work. The S/M and arrow keys will not.



To Unlock
Long press of the F button until the radio beeps and the lock disappears. The radio is now unlocked and all keys will function as programmed.



Please Note

The default setting of the Keypad Lock is the F key.

Depending on the programming of the radio, the Keypad Lock might be located under a different button.