

Components

- Push Button Transmitter
- Alpha Pagers (RALPHA & STFIQ)
- Charging Base (with power supply – STFIQ Only)
- USB A to Micro USB Cable (Optional – STFIQ Only)



Equipment Setup


Step 1 – Push Button Setup

Place the Push Button Transmitter in a convenient location (Table, Counter) away from heat and humidity. (See Page 2 for more installation information)




Step 2 – RALPHA (Battery Installation)

On the back, push the clear lock up to unlock the battery cover. Slide the battery cover off. Once opened, insert battery. Slide the cover back on and push the clear lock down to secure the battery cover in place.

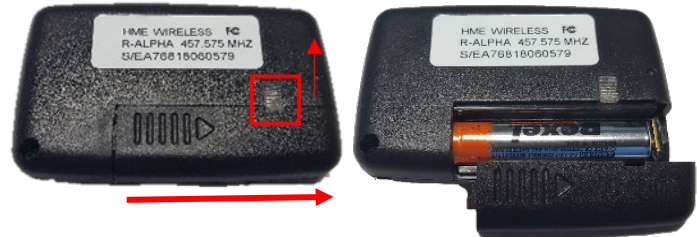

Step 2a – STFIQ (with Charging Base)

Plug the power supply into the charging base and then into a standard 110-240v outlet. Insert all pagers into the charging base.

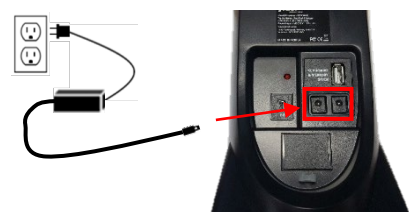

Step 2b – STFIQ (Without Charging Base)

Plug the cable into a USB port/charger (not included) and then plug the Micro USB into the side of the pager.



**A Surge Protector is recommended on all charging bases.

System Operation

Placing the Push Button Transmitters:

Place transmitters in a convenient location wherever you need them. You can simply set the transmitter on a counter or table, or you can Velcro it down to secure it. These transmitters can still have their batteries replaced with properly installed Velcro on the bottom side of the transmitter.

Handing out the pagers:

Give the staff member a pager. Tell the staff member the pager will alert when they are needed. The default page for this system is programmed for the pager to vibrate for 8 seconds. After the pager is finished vibrating it automatically goes back into standby mode waiting for the next page. Hand the pagers out from the charging base (they will “demo” page each time they are removed from the stack) or you can simply store them in a basket and hand them out. A fully charged pager will function all day without being recharged. You can reset a pager by inserting it into the charging base.

Paging the watch pager:

Push Button Transmitters come with 1 or 3 buttons. Press one of the buttons and the page will be sent to the corresponding pager. A red light will display for two seconds indicating a successful page.

Example:

If you push the #3 button on Push Button Transmitter #3, the corresponding pager (Shown below) will display a message “**Manager to Table 3**”



Attaching to a Surface

- Remove the paper backing from one side of the included double-sided foam adhesive.
- Attach the foam adhesive to the back of the push-button transmitter.
- Remove the remaining paper backing from the other side of the foam adhesive.
- Firmly press the transmitter onto the desired table or wall surface.
- [Click for Instructional Video](#)



Optional Holder – Clear or Black (Sold Separately)

- Create 2” x 2” Button Label
- Open Holder – Splits into two halves.
- Place Label using indent guides between the top and bottom.
- Place or adhere button in the space provide.
- Align the top and bottom to enclose label between.
- [Click for Instructional Video](#)